


# ESSENTIALS

## BBESR BEAM LOCATIONS

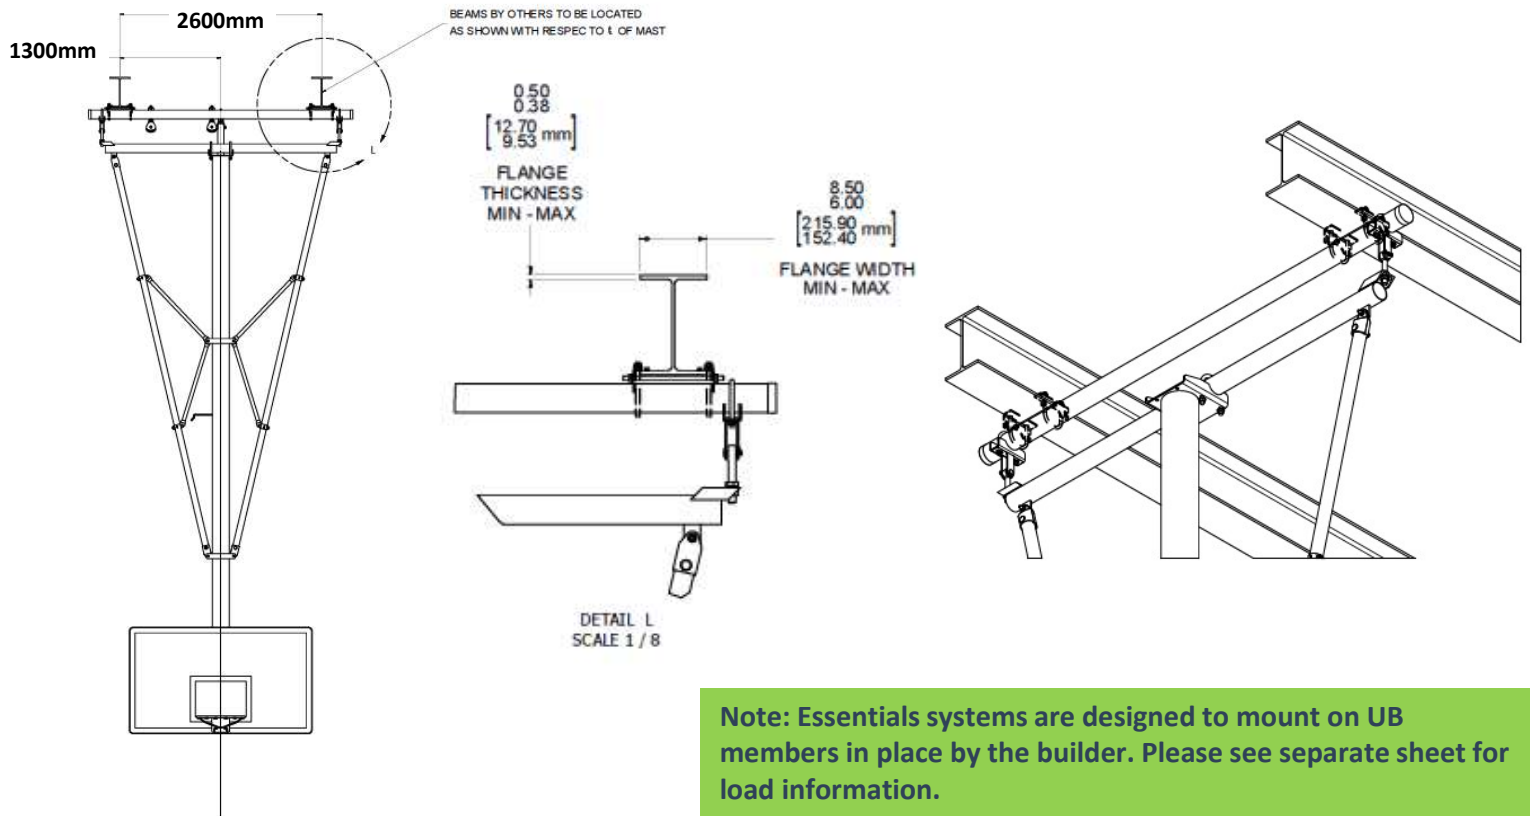

Note: Essentials systems are designed to mount on UB members in place by the builder. Please see separate sheet for load information.

Specifications may change without notice